
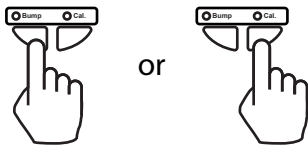


AutoRAE Lite Quick Reference

CALIBRATION

- Make sure calibration gas cylinder is attached and pressure gauge reads ≥ 50 psi.
- Make sure the power LED is glowing.
- Make sure a filter is attached and that the air inlet is not blocked.

1. Turn on the ToxiRAE 3: Press and hold the MODE (Ⓢ) button.
2. After the ToxiRAE 3 has started and displays a reading, press the Y/+ button until its display shows "lr."
3. Firmly press the ToxiRAE 3 face-down into the dock on the AutoRAE Lite.
4. When both the Bump and Cal. LEDs glow green, press "Bump" to perform a bump test, or press "Cal." to perform a calibration.

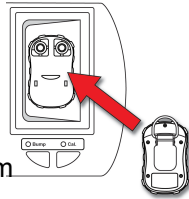

During a bump test or calibration, the status LED blinks and is orange.

PASS: A green LED indicates the bump test or calibration was successful.

FAIL: A red LED indicates the bump test or calibration failed.

SIDE A

AutoRAE Lite Quick Reference

LED REFERENCE

Status LED explanation

LED	Red	Green	Solid Orange	Blinking Orange
Power	Battery low, no external power	External power or battery OK	---	---
Bump	Fail	Pass	---	Processing
Cal	Fail	Pass	---	Processing
Service Request	No SD card, or communication failure, or SD card space is very low	---	---	SD card is locked or needs to be formatted, or SD card space is very low

SET THE TIME

Set the AutoRAE Lite's time before its first use, and whenever the AutoRAE Lite has not been used for more than 10 days. Refer to the AutoRAE Lite User's Guide for instructions.

WARNING

Only use this instrument in non-hazardous locations.

For further information on use and maintenance, refer to the AutoRAE Lite User's Guide.

Tech Support Email: tech@raesystems.com
Tech Support Phone: +1 408-952-8461



RAE Systems by Honeywell
3775 N. First St., San Jose, CA 95134 USA
www.raesystems.com

Rev. B Feb 2008 P/N T01-0901-000D

SIDE B

**Finished size should be 85mm x 170mm.
Colors: Black and red.**



MICROWATT
Making Safety Work

Tollfree in Western Canada: 1-888-388-1592
microwatt.com • mwsales@microwatt.com