

USER GUIDE

SONIM XP5

English



MICROWATT
Making Safety Work

Tollfree in Western Canada: 1-888-388-1592
microwatt.com • mwsales@microwatt.com

sonim[®]
BUILT FOR LIFE™

Copyright © 2015 Sonim Technologies, Inc.

SONIM and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trademarks of the respective owners with whom they are associated.

Disposal of Old Electrical and Electronic Equipment



This symbol indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection system at their end-of-life.

Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Guideline for Headphone and Earphone



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

General Information----- 7
 Phone Models Covered
 Sonim Support Information

Safety Guidelines----- 8
 SAR Information
 Avoid High Temperatures
 Battery Disposal
 Personal Medical Devices
 Child Safety
 Emergency Calls

Battery Usage Guidelines----- 13
 Battery Usage
 Charging the Battery
 Verifying and Optimizing Battery Usage
 Tips to Extend the Battery Life

Getting Started----- 15
 What Is In the Box?
 Phone Specifications

Your Sonim XP5----- 16
 Switching On
 Setting Up Your Phone
 Managing Home Screen
 Notification Bar Icons
 Phone Operations Without SIM Card
 Setting Up and Using Lock Screen
 Changing the Wallpaper
 Taking a Screenshot
 Text Entry Options
 To change Input language
 To Enter a Word
 Keypad Functions

Managing Phone Settings----- 25
 Time and Date Settings
 Language and Input Settings

Display Settings
 Power Saving Settings
 Connecting a PC Using USB Connection
 Viewing Device Details
 Optimizing Memory Usage

Managing Wireless and Network Settings----- 28
 Connecting to Wi-Fi Network
 Connecting to Bluetooth Devices
 Optimizing Data Usage
 Activating Airplane Mode
 Setting Up Tethering & Portable Hotspot
 Setting Up Wi-Fi Hotspot
 Activating Bluetooth Tethering
 Managing Mobile Network

Managing Personal and System Settings----- 31
 Managing Security Settings
 Locking Your Screen
 Encrypting Phone Data
 Locking Your SIM Card
 Managing Credential Certificates
 Protecting Your Phone from Harmful Applications

Managing Personal and System Settings----- 32
 Location Access
 Apps Accessing Your Location
 Backup/Restore Your Data

Managing Contacts----- 33
 Add a New Contact
 View the Contact Details
 Sending a Message from Contacts
 Dialing a Number from Contacts
 Editing the Contact Details
 Importing SIM Card Contacts to Phone

Exporting Phone Contacts to SIM Card	
Exporting Phone Contacts to Storage	
Managing Contact Settings	
Managing Phonebook Settings	
Searching Contacts	
Deleting a Contact	
Managing Calls -----	36
Making a Call	
Dialing a Number via Contact	
Adding a Contact from Phone Screen	
Viewing Call History	
Deleting Call History	
Managing Call Settings	
Changing Ringtones and Master Volume	
Editing Quick Responses	
Activating Vibrate Mode	
Managing Fixed Dialing Numbers	
Call Forwarding	
SIP Accounts	
Use Internet Calling	
Sending Messages -----	39
Sending SMS/MMS Messages	
Managing Message Settings	
Deleting Messages	
Emergency Alerts	
Using the Phone Keypad -----	42
Enter and Edit Text	
Phone Dictionaries	
Installing and Accessing Push-To-Talk Services -----	43
Activating PTT Using Wi-Fi	
Enhanced PTT Users Advanced Setting	
Creating PTT Contacts -----	45
Adding Contacts from Native Phonebook	
Adding Contacts by Manual Input	
Creating New PTT Groups -----	48
Making PTT Calls to Individuals and Groups -----	49
Making a PTT Call to an Individual	
Making a PTT Call to a Group	
Making a Quick Group Call	
Editing PTT Contact	
Managing PTT Groups and Contacts -----	53
Deleting PTT Contact	
Editing PTT Group	
Deleting PTT Group	
Adding a Favorite Contact	
Managing PTT Presence -----	58
Adding a Favorite Group	
PTT Presence Status Change	
Managing Alerts -----	60
Sending Personal Alert	
PTT Presence Status -----	62
Receiving Personal Alert	
Missed call Alert	
PTT Settings -----	65
Logout of PTT Service -----	68
Installing and Using Applications -----	69
Camera	
Calendar	
Alarm	
Clock	
Calculator	
Sound Recorder	
Music Player	

End User License Agreement— — — — — 71

License
Comprehensive 3-Year Warranty
Warranty Registration Application
Our Warranty
What We Will Do
Phone Care
Conditions
Accessories

**Federal Communication Commission Interference
(FCC) Statement— — — — — 75**

FCC Statement
FOR PORTABLE DEVICE USAGE (<20cm from body/
SAR)

Industry Canada (IC) Statement— — — — — 77

IC Statement
FOR PORTABLE DEVICE USAGE (<20CM FROM
BODY/SAR)

Règlement IC— — — — — 78

Règlement IC
FOR PORTABLE DEVICE USAGE (<20cm from body/
SAR needed)

Index— — — — — 79



COMPREHENSIVE 3-YEAR WARRANTY

Please register your phone at www.sonimtech.com/register, to receive product information and updates.

Sonim devices are covered by a 3-year comprehensive warranty. The removable battery is covered by a 1-Year limited warranty. For more information related to the warranty, please refer to the warranty section “Comprehensive 3-Year Warranty” on page 71.

Congratulations on the purchase of a Sonim XP5 mobile phone. This phone is an LTE phone enabled handset with quad-band capabilities and has an intuitive, feature-rich user interface, which allows you to make the best use of the offered functions.

Phone Models Covered

This user guide covers the Sonim XP5 phone with the model number XP5700. The model name can be read on the phone label under the battery.

Sonim Support Information

For additional product and support information, visit www.sonimtech.com.

Options Commonly Used Across Menu Items

The following are common actions used across various menu items:

OK	Confirms an action. Use the Center navigation key to perform this function.
BACK	Use this key to display the previous screen.
MENU	Moves the current working application to the recent applications list/background and displays menu screen.
RECENT	Displays the thumbnails of the applications that you have worked on recently. To remove any application from this list, Select Remove from list from option.

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Do not use the phone at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the battery to high temperatures (in excess of 55°C).



Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only Sonim XP5 approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection systems at their end-of-life.





Ensure that only qualified persons install or repair your phone.



The Sonim XP5 is water-proof and can be submerged to 2 meters for 1 hour.

- The rubber cover of the charging connector and audio connector must be properly connected to avoid deposits of water drops on these connectors when the phone is immersed in water.
- Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets disappear at room temperature.

The Sonim XP5 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP5 from salt water, dust and strong impacts.

SAR Information

The Sonim XP5 has been certified in compliance with the Government's requirements for exposure to Radio Waves.

When communicating over the wireless network, the mobile phone emits via the radio frequency waves and low levels of radio energy. The Specific Absorption Rate, or SAR, is the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.). These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

SAR Data Information for residents in the United States and Canada

The limit recommended by ICNIRP is 1.6 W/kg averaged over one (1) gram of tissue.

The highest SAR value for the Sonim XP5700 phones when tested by Sonim for use:

- By the ear is 1.31 W/1kg.
- Worn on the body is 1.26 W/1kg provided that the phone is used with a non-metallic accessory with the handset at least 1 cm from the body, or with the original Sonim accessory intended for this phone

and worn on the body.

HAC Rating

The FCC has created a rating system for cellular phones regarding their HAC-related performance. This rating helps consumers with hearing disabilities to find phones that work well with their hearing aid devices. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19:2011.

ANSI C63.19 contains two rating standards: an "M" rating from 1 to 4 for hearing aids operating in microphone mode, and a "T" rating from 1 to 4 for hearing aids operating in telecoil mode.

M-Rating stands for Microphone rating and indicates the amount of reduction of RF interference between the telephone and the hearing aid in acoustic coupling mode (also called microphone mode).

Phones rated M3 or M4 meet FCC requirements and generate less interference to hearing devices set in microphone mode. T-Rating stands for Telecoil rating and represents inductive coupling with hearing aids that are operating in telecoil mode. A telecoil is a small piece of tightly wrapped wire, built into some hearing aids. While the microphone of a hearing aid picks up all sounds, the telecoil only picks up an electromagnetic signal from the telephone. Thus, users of telecoil-equipped hearing aids are able to communicate over the telephone without the amplification of unwanted background noise.

Phones rated T3 or T4 meet FCC requirements and generate less interference to hearing devices set in telecoil mode.

A combination of M-rating and T-rating defines the final HAC rating and is a deciding factor in selecting

cellular phones for people with hearing problems. A HAC compliant phone could be rated:

- M3/T3
- M3/T4
- M4/T3
- M4/T4

These ratings assist hearing device users to find phones that are compatible with their hearing devices. Ratings are shown on the phone's box or label. The ratings are not guaranteed for suitability. The results vary depending on the individual's hearing loss and the immunity characteristics of the used hearing device, i.e. its resistance to interference. The best way to evaluate the suitability of the phone is to try it with the intended hearing aid device.

Sonim XP5 has been tested for hearing aid device compatibility and complies with the Federal Communications Commission (FCC) requirements. Sonim XP5 is rated M3/T4.

Avoid High Temperatures

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. For the best results, try to keep the device between -20°C and +55°C (-4°F and 131°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Battery Disposal

Do not dispose of batteries in a fire as they may explode.

Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of leak or a hazard seek medical help immediately.

Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and airplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmospheres or when close to electro-explosive devices.

Child Safety

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be

detached and create a choking hazard.

Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Battery Usage

Sonim XP5 phone comes with a removable battery. For any battery related queries contact Sonim customer support.

Charging the Battery

We recommend that you charge your mobile phone for 4 hours before using for the first time.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

1 Insert Charger

Insert the charger plug into a power outlet.

2 Connect to Phone

The charging port is located in the lower side of the phone, below the back cover. Insert the charger connector to the charging port.

3 Charging Animation/Icon

If the battery is being charged when the phone is switched off, a battery charging animation with charged percentage is displayed.

If the battery is being charged while the phone is switched on, the battery charge icon on the home screen shows animation indicating that the battery is being charged. After the phone is fully charged, the battery full pop-up is displayed and you can disconnect the charger from the phone.



Verifying and Optimizing Battery Usage

You can check the battery usage status and also close some applications to save battery power. In the menu screen, select **Settings** (⚙️) > **Battery** (🔋).

The current battery charge status (charging or not charging) and the charge level details are displayed on the top of the screen.

The discharge graph on the top of the screen shows the battery level over time since you last charged the device, and how long you have been running on battery power.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. The details screen for some apps includes buttons that allow you to adjust settings affecting power usage, or stop the app completely.

Tips to Extend the Battery Life

Follow these tips to extend your phone's battery life.

- If you are not using Wi-Fi, Bluetooth or GPS, use the **Settings** to turn them off. The GPS setting is located in **Settings > Location**.
- Set screen brightness to **Low** and set a shorter Sleep timeout (15 seconds). The display settings are located in **Settings > Device > Display**.
- If you are travelling and do not have access to mobile or Wi-Fi network, switch to Airplane mode: From Home screen press **Options** key and choose select **Airplane Mode** from **Quick settings**.

What Is In the Box?

The list of items in the Sonim XP5 phone box are:

- Sonim XP5 phone with removable battery
- Quick Start Guide
- USB Data Cable
- Wall Charger

Phone Specifications

Feature	Description
Memory	Total Memory: 4GB Total User Storage: 1.8 GB
Wireless	Wi-Fi - 802.11 a/b/g/n/r with hotspot function (Max. 5 connections) Bluetooth 4 + LE
Connectivity	Charger port name: 5 pins water-proof magnetic USB 2.0 3.5 mm headphone jack
Battery	3180mAh (4 pins) embedded Standby: 25 days Talk time: 25 hours Music playback: up to 59 hours Video playback: up to 8.5 hours Web browsing: up to 7.5 hours

Sonim XP5 Phone



Switching On

Press and hold **ON/OFF (red key)** for 2 seconds.

When the phone is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.



Ensure that a valid SIM card is inserted in your phone.

Setting Up Your Phone


For instructions on using your phone's buttons, charger, battery, and other hardware features, check the printed **Quick Start Guide** provided along with your phone.

When you power ON the phone for the first time, a Welcome screen is displayed.

- To choose the language, select **Options key > Settings > Language & Input > select Language.**
- To set up your phone, select **Start** and follow the instructions as shown on the screen.




Managing Home Screen

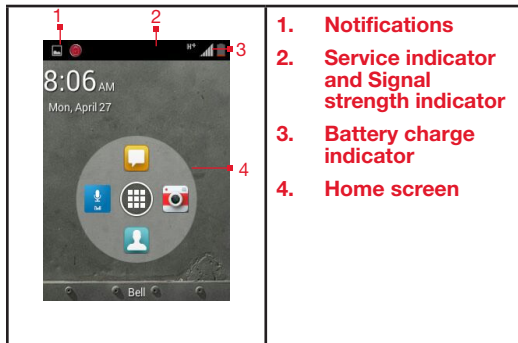
The home screen is the beginning point to access all the device's features.



The navigation keys are located below the display screen.

Key	Description
	Back - Opens the previous screens in the working sequence till the home screen is displayed. Once the home screen is displayed, it remains there even when you press the back key.
	Menu - Short press brings the Application menu screen. Long press displays recently used application list.

Key	Description
	Options - displays the options for the currently active screen.
	Clear - Clears the entered text.
	Torch - Long press turn ON./ OFF the flashlight.









The **Menu Option** () is positioned in the center of the favorites tray in Home screen. Press **OK** Key to select to view all the applications.










The **Notifications** bar on the top of the display screen provides details about various notifications such as missed calls, new messages, and missed alarms.










The **System Icons** on the right side of Notification bar the current device status such as wireless and network connection strength and battery level.

Notification Bar Icons

The icons displayed at the top of the screen provides information about the status of the device. The details such as battery status and data service are displayed when the phone is in standby mode. Other indicators such as Bluetooth connectivity status, airplane mode, alarm and call forward (only if Always forward is enabled) and Wi-Fi connectivity are displayed, if the feature is activated.

Icon	Description
	Notification icon
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card
	Roaming
	4G LTE network connected

Icon	Description
	HSPA or UMTS network connected
	GPRS network connected
	EDGE network connected
	Wi-Fi connected
	Bluetooth activated
	Call in progress
	Missed call
	New SMS or MMS
	Alarm activated

Icon	Description
	Silent mode activated
	Vibration mode activated
	Airplane mode activated
	Error/information notification - attention required
	Screenshot captured
	Music is played
	Device storage space is running out
	PTT Available status icon
	PTT Offline status icon

Icon	Description
	PTT Do Not Disturb status icon


Phone Operations Without SIM Card

You can perform the following operations without inserting a SIM card in your phone.

- Make emergency calls.
- View and modify all settings except Data usage and mobile network related settings.
- Activate and share files through Bluetooth.
- Activate and access the Internet, and all your synced accounts using Wi-Fi connectivity.
- Access the Internet using Browser or other application over Wi-Fi data connectivity.
- View and modify your profile settings.

Setting Up and Using Lock Screen

You must lock your phone to protect it from unauthorized access.

1. From the **Home** screen, select **Options key > System settings** or select **Menu > Settings** (.
2. Scroll down and select **Security**, located under **Personal** settings.
3. Select **Screen lock** and select one of the following options to configure phone:

- Press and hold * key.
- **PIN:** When enabled, enter you own PIN value. When the phone is locked, unlock it using the PIN.

When the phone is locked, you can answer an incoming call, without unlocking the phone.


Changing the Wallpaper

You can set an image or a photo stored in your phone as your home screen wallpaper. To change the wallpaper, select from one of the following Wallpaper collections.

1. From the home screen, select **Options key > Wallpaper**. Select **Choose wallpaper from** the popup.
 - **Gallery:** includes photos and screenshots taken using the phone's camera.
 - **Wallpapers:** includes images that are pre-loaded with the phone.

Taking a Screenshot

You can take the screenshot of the current screen and it is stored in your phone's gallery. To take a screenshot:

1. Ensure that the image to be captured is displayed on the current screen.
2. Press the **Power** and **Volume** down button simultaneously. The screenshot is captured and stored in the gallery. A screen **Capture** icon () is also displayed on the **My Notifications/Notification bar** on top of the screen.

Text Entry Options

When you enter the text message, you can change the text entry options by pressing the # key. The current text entry options are displayed in the top bar.

The various text entry options are:

- **ABC:** Enter all the text in upper case.
- **Abc:** Enter the first letter of the sentence in upper case.
- **abc:** Enter all the text in lower case.
- **123:** Enter the numbers.
- **T9ENG:** Enter the text based on the T9 dictionary. All the letters are in upper case (capitalized).
- **T9eng:** Enter the text based on the T9 dictionary. All the letters are in lower case.

To change Input language

Long press # key while in a text editor and choose the input language.

To Enter a Word

1. Start by pressing the numeric keys from **2** through **9** only once for the required letter.

Ex 1: To enter the word Good, press 4-6-6-3. The word displays on the screen as you type.

Ex 2: To enter the word Hello, press 4-3-5-5-6. The word displays on the screen as you type.

2. If the word does not display correctly, press right navigation key to scroll through alternative word

choices. Press either the center **navigation key** or **0** key to accept the word.

To Insert a Number:

 




1. Press the key labeled with the number you want and use the navigation key to scroll to that number as above.
2. To insert a symbol, press and hold the numeric key **1** and use the **navigation key** to scroll and select a symbol.








The different methods to enter the text:



- **T9EN:** Enter the text based on the T9 dictionary. All the letters is in upper case (capitalized).
- **T9En:** Enter the text based on the T9 dictionary. Only the first letter of the paragraph is in upper case (capitalized).
- **T9en:** Enter the text based on the T9 dictionary. All the letters are in lower case.

Keypad Functions

The following table displays the various keys and the corresponding functions they perform:



Keypad key	Operations
 CALL END/REJECT/ON/OFF	<ul style="list-style-type: none">• Press to end a call.• Press to wake up display.• Press to reject an incoming call.• Press and hold to power ON/OFF the device.
 CALL/ACCEPT/SEND	<ul style="list-style-type: none">• Press to answer an incoming call.• After entering a phone number, press to make a call.• Press while in Standby mode to access last received or dialed call list.
 BACK	<ul style="list-style-type: none">• Present above the Torch key. Press this key to go back to the previous screen.• You can press till you reach the Home screen.
 MENU(OK)/RECENT	<ul style="list-style-type: none">• Press to see the Main menu.• Press and hold to see the recent applications.
 CLEAR	<ul style="list-style-type: none">• Press to clear the entered text.• Press to delete a selected file.

 <p>TORCH</p>	<ul style="list-style-type: none"> • Press and hold to enable the flashlight.
 <p>OPTION</p>	<ul style="list-style-type: none"> • Press to see the list of operations that can be done on current application.
 <p>OK KEY (CENTER)</p>	<ul style="list-style-type: none"> • Press to perform a specific operation on a selected application.
 <p>NAVIGATION KEYS</p>	<ul style="list-style-type: none"> • Press to navigate in up, down, left and right directions.
<p>ALPHA-NUMERIC KEYS</p>	<ul style="list-style-type: none"> • Press the required keys (0-9) to enter the desired phone number and press  to make a call. • Enter text while in the text editor.
	<ul style="list-style-type: none"> • Press and hold in standby mode to access your Voicemail. • Press and hold to insert symbols while in the text editor.
	<ul style="list-style-type: none"> • Press and hold to display '+' used for dialing an international number, while in standby mode. • On editor screen, press 0 to get a blank space in T9 or normal mode.

	<ul style="list-style-type: none">• Press or press and hold to change the language, while entering the text.• Press and hold to lock/unlock the keypad.
	<ul style="list-style-type: none">• While entering text, press to switch between various input modes.• Press and hold to list various input modes while entering the text.

Time and Date Settings


 
You can set and display the date and time on the phone. You can also select the display format.

1. From the **Home** screen, select **Menu** key > **Settings** ()
2. Scroll down and select **Date & Time** () , located under **System**.
3. Select one of the following options to configure phone:
 - To synchronize the date and time with the network provided time, enable **Automatic date and time**.
 - To synchronize the time zone with the network provided time enable, **Automatic time zone**.
 - To set the date manually, uncheck **Automatic date & time** and select **Set date**. Scroll and select the date, month and year. Select **Done** by pressing **OK** Key.
 - To set the time manually, select **Set time**. Scroll and select the hour and minute. Select **Done**.
 - To set the time zone, uncheck **Automatic time zone** and select **Select time zone**. Scroll and select your time zone and press **OK** Key.
 - To set the clock to 24-hour format enable **Use 24-hour format**. By default, the phone is set to 12-hour format.
 - To set your preferred date di, select **Choose date format**. The date formats supported are Regional (the standard format supported by that country or region, **MM DD YYYY**, **DD MM YYYY**, **YYYY MM DD** with / as the date

separator).

Language and Input Settings

You can set the phone's language to either French or English.


1. From **Home** screen, select **Menu** > **Settings** ()
2. Scroll down and select **Language & input** () , located under **Personal** settings.
3. Select **English** or **Français** as your preferred language.

All the menu items, user feedback messages and text entry language are displayed in the set language.

Speech Settings

- Select **Text-to-speech** output under **Speech category**.
- Select **Speech rate**, to set the speech output rate to a comfortable speed.
- Select **Listen to an example** to verify the set speech rate.
- Select **Default language status**, to view the default language for speech input.

Display Settings


1. From the **Home** screen, select **Menu** key > **Settings** ()
2. Scroll down and select **Display**, located under **Device** settings.
3. Set one of the following options to configure your phone's display:

- **Brightness:** Set the brightness of the phone display. This also optimizes the battery power consumed.
 - **Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
 - **Gallery:** Choose from pictures that you have in your phone that includes downloaded and camera captured images.
 - **Wallpapers:** includes images that are pre-loaded with the phone.
 - **Sleep:** Set the sleep time so that the screen brightness is turned down after specified time of phone inactivity. This setting also optimizes the battery power.
 - **Font size:** Set the font size of the text displayed in the screen.
4. **Pulse Notification Light:** Check/Uncheck to set the notification light.

Power Saving Settings


Viewing Battery Life

To view the battery life when all the apps are running:

1. From the **Home** screen, select **Menu** key > **Settings** (.
2. Scroll down and select **Battery**, located under **Device** settings.

The battery life and list of running applications is displayed.

Force Stopping an Application

1. From the **Home** screen, select **Menu** key > **Settings** (.
2. Scroll down and select **Apps**, located under **Device** settings.
3. Select the application to be force stopped.
4. Select **Force stop** to stop an application.



If you force stop an app, it may misbehave.

Connecting a PC Using USB Connection

You can connect your phone to a PC as a Media device (MTP) using a USB cable. When the phone is connected to the computer via a USB cable, the following two options are displayed:

- **Media device (MTP):** Select this to use the phone as Media device (MTP) to transfer data such as music, pictures, and videos between your Sonim phone and your computer.
- **Camera (PTP):** Select this to transfer photos and files that do not support MTP. This transfer method is commonly used for MAC.

USB Tethering

This feature allows you to share the Internet connection of the phone with your PC.

To perform USB Tethering, connect phone to PC with USB cable and enable USB tethering from **Settings**. (**Settings > More... > Tethering & portable hotspot > Enable USB tethering**).

The user should activate mobile data or get connected to Wi-Fi network.

- Uninstall apps that are not required.
- Delete unwanted files that are downloaded or created.
- Transfer files that would be required later to your computer.




When the phone is connected to the computer via USB cable, you can select only to charge the phone by pressing the Back button. You need not select the Media device (MTP) or Camera (PTP) option.



When the phone is connected to the computer via USB cable in Media device (MTP) mode phone memory is displayed in the computer.

Viewing Device Details

The device details such as system update status, model number, Kernel and baseband versions can be viewed.

1. From **Home** screen, select **Menu > Settings** ().
2. Scroll down and select **About Phone**, located under **System** settings.



Optimizing Memory Usage

You can optimize your phone's memory by performing the following tasks:

Connecting to Wi-Fi Network

Wi-Fi is a wireless network technology that can provide Internet access at distances up to 100 Feet, depending on the Wi-Fi router and surroundings, when you connect your mobile device to the wireless router.

You can access the Internet when you connect your XP5 to a Wi-Fi network. To connect your phone to a Wi-Fi network.

1. From the **Home** screen, press **Menu** key > **Settings** (.
2. Set the **Wi-Fi** to **ON**, located under **Wi-Fi** settings.
3. Select **Wi-Fi**. The phone scans for available Wi-Fi networks and displays the names.
4. Select the Wi-Fi network you want to connect and input password if it is a secured networks that is indicated with a Lock icon (.



It is always recommended to make your Wi-Fi router secure and also to connect your phone to a secure network.

Adding a New Network

To add a new Wi-Fi network

1. In **Wi-Fi settings** screen, press **Options key** > select **Add network**.
2. Enter the following details:
 - **Network SSID:** The wireless network ID.
 - **Security:** Set the security type to None, WEP, WPA/WPA2 PSK, or 802.1x EAP.
3. Enable **Show advanced options** to set the **Proxy**

and **IP settings**.

Editing a Network

1. Press and hold your preferred network.
2. Select **Modify Network**. The network setting details such as connection status, signal strength, connection speed, security type, IP address and password are displayed.
3. Select **Save** to save the settings or **Cancel** to exit to the previous screen.

Forgetting a Network

1. Press and hold your preferred network.
2. Select **Forget Network**. The selected network is removed from the list.

Enabling WPS For your Router

To setup a secure **Wi-Fi network**, press **Options** key to select **WPS Push button** from Wi-Fi menu and press the **WPS button** in your router, when prompted.

Connecting to Bluetooth Devices

Bluetooth is short-range wireless communication technology used to communicate between the devices over a distance of about 8 meters (26.25 ft).


You can perform the following tasks using Bluetooth paired devices.

- Transfer media files and contacts between connected mobile devices using Bluetooth.
- Share Internet connection using **Bluetooth Tethering**.
- Use Bluetooth connected headphones for playing

media file.

Pairing a Bluetooth Device

To activate Bluetooth and pair your XP5 phone with other Bluetooth devices:

1. From **Home** screen, select **Menu** key > **Settings** ().
2. Enable **Bluetooth** located under **Wireless & Networks** settings.

A list of accessible Bluetooth devices are displayed.

3. Select a device you wish to connect.
4. Confirm the passkey in both the devices to pair.

Now the device will be displayed in the **Paired device** list.


Editing Bluetooth Device Settings

1. Choose a device from Paired device list and press **OK**(Center) key to select.
2. Select **Rename** to rename the display name of the device .
3. Select **Unpair** to remove the device from your paired list.
4. Enable **Media Audio** to connect the Bluetooth device for listening to media files.
5. Enable **Internet access** to use the paired Bluetooth device to access the Internet.

Optimizing Data Usage


Data usage refers to the amount of data utilized by your phone during data transfers through the Internet. The data usage charges are dependent of the wireless plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.

1. From **Home** screen, press **Menu** key > **Settings** () > **Data usage**.
2. Enable **Set mobile data limit** and reset your data usage **limit** and **warning** values by selecting from Usage graph displayed.
3. Press **OK** (Center) key on red bar to set the Data usage **limit**. Mobile data access is disconnected automatically as soon as you reach this limit. You receive a notification once you reach the set data usage **limit**.
4. Press **OK** (Center) key on yellow bar to set data usage warning so that you receive an alert before reaching your set data usage limit.
5. You can also set **Data usage cycle** option to a particular date of a month.

Activating Airplane Mode

When your phone is set in airplane mode, you will not have network connectivity or mobile data connectivity. But you can access your camera, media files and other features that do not require mobile connectivity.

1. From **Home** screen, select **Menu** key > **Settings** ().
2. Select **More...** located under **Wireless & Networks**


settings.

3. Enable **Airplane mode**.

Setting Up Tethering & Portable Hotspot


Using **Tethering and Portable hotspot**, you can share your device's network connection with a computer or other devices, via USB, Wi-Fi or Bluetooth.

To activate USB Tethering:

1. Connect your phone to **PC** with USB cable.
2. From the Home screen, Press **Menu key > Settings** ()
3. Select **More...** located under **Wireless & Networks** settings.
4. Select **Tethering & Portable hotspot**.
5. Enable **USB tethering**.

Setting Up Wi-Fi Hotspot


When you setup your phone as a Wi-Fi hotspot you can connect other devices to this phone through Wi-Fi and access the Internet.

1. From the **Home** screen, press **Menu key > Settings** ()
2. Select **More...** located under **Wireless & Networks** settings.
3. Select **Set up Wi-Fi hotspot** option and press **OK** key to open.
4. Enter **Network SSID**, **Security type** and **Password** and select **Save**.

5. Enable **Portable Wi-Fi hotspot** option.


Activating Bluetooth Tethering

When you activate Bluetooth tethering, you can share your phone's Internet connection with other Bluetooth paired devices.

1. From the **Home** screen, press **Menu key > Settings** ()
2. Select **More...** located under **Wireless & Networks** settings.
3. Select **Tethering & Portable hotspot**.
4. Enable **Bluetooth tethering**.


Managing Mobile Network

You can view and modify your mobile service provider settings. To view and modify your mobile network settings:

1. From the **Home** screen, press **Menu key > Settings** ()
2. Select **More...** located under **Wireless & Networks** settings.
3. Select **Mobile networks**.
4. Enable **Data enabled** option to access the Internet using your mobile network.
5. Enable **Data roaming** to have network connectivity when you are in a roaming network.
6. Select **Access Point Names** to view and edit the network access points. Press **Options Key** and select **New APN** to add a new access point.

Managing Security Settings

You can activate and protect your phone from unauthorized access by configuring the security settings.

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Security** located under **Personal** settings. Enable and modify required security settings.

Locking Your Screen

1. Select **Screen lock** and select one of the following options to configure phone:
 - Press and hold * key.
 - **PIN:** When enabled, enter your own PIN value. When the phone is locked, unlock it using the PIN.

When the phone is locked, you can answer an incoming call without unlocking the phone.

2. Enable **Owner Info** to display your specific owner info in the lock screen. You can modify this detail whenever required.

Encrypting Phone Data

You can encrypt your phone settings, download applications, contacts, messages data and media files.

Select **Encrypt phone** to encrypt your phone data. This will require a numeric PIN or password to decrypt the data whenever you power ON the phone.

Encryption takes at least an hour depending on the amount of data to be encrypted. Hence, ensure that your phone is fully charged before you encrypt it.

If data encryption is interrupted, you might lose your phone data.

Locking Your SIM Card

You can activate and set a SIM lock to lock your SIM, whenever you power ON the phone.

1. Select **Settings > Security > Setup SIM/RUIM card lock**.
2. Enable **Lock SIM card**.
To disable this option you must enter your SIM lock PIN.
3. Select **Change SIM PIN**. Enter the old pin and select **OK**.
4. Enter the new PIN and re-enter the same value when asked. Select **OK**.

Managing Credential Certificates

You can view, install, verify and manage the certificates installed in your phone.


- Select **Trusted Credentials** to view and verify the system and user certificates.
- Select **Install from Storage** to view and install new user certificates.

Protecting Your Phone from Harmful Applications

Some applications can harm your device. It is recommended to verify apps in order to help prevent harmful software from being installed on your device. To prevent installation of application from unknown sources, disable the option **Unknown sources**.

Location Access

You can enable and configure the **Location** settings.

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Location** located under **Personal** settings. Enable and modify required security settings.
3. Enable **Location**.
4. Set the **Location mode** to one of the following options:
 - **High accuracy:** uses AGPS, Wi-Fi, mobile networks, and other sensors to get the highest-accuracy location for your device. It uses location services to help estimate your location faster and more accurately.
 - **Battery saving:** allows your device to estimate your location using low battery-intensive location sources, such as Wi-Fi and mobile networks. It uses location services to help estimate your location faster and more accurately.
 - **Device only:** allows your device to estimate your location using GPS only. It uses the satellite information to provide location information. This mode may use more battery power and take longer to determine your location.

Apps Accessing Your Location

You can view and force stop the apps that are accessing or have recently accessed your location.

1. In the **Location** screen, view the list of applications that are accessing or recently accessed the

location data of your phone, under **Recent location requests**.


2. Select an application to view the application page. You can stop the application or uninstall it. The system applications will have access to location services by default.
 - **High battery use:** This app receives location information from sources that may use more battery power.
 - **Low battery use:** This app receives location information from only low battery-intensive sources.

Selecting an app brings you to its **App info** page, where you can view app permissions and uninstall an app.

Backup/Restore Your Data



You can backup your phone memory data to SD card and restore previous backup data from SD card using **Backup and Restore** application.

To backup your data,




1. From the **Home** screen, select **Menu > Applications** ().
2. Select **Backup** or **Restore** option.

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, dial phone numbers and send SMS and MMS messages.


To access the contacts:

From **Home** screen, press **Down navigation key** () to open **Contacts** (). The contacts saved in the phonebook are displayed.

Add a New Contact

- To add a new contact, press **Options key** () > choose **Add Contact**. Enter the contact details and press **Menu key** and select **Save** to save the contact.
- You can also enter a number using keypad () and select **Add to contacts** () and press **Menu key** and choose **Create New Contact** option to add a new contact. Select **Save** to save the contact.


View the Contact Details


- From **Home** screen, select **Options key** > **Contacts** ().
- Scroll to the required contact and select the contact, to view the contact details.

Sending a Message from Contacts

You can send SMS and MMS messages to contacts.

Sending SMS/MMS


- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select **Message** from option to open the message screen.

- (Optional). Select **Attach** (), to attach a multimedia file.
- Type the message and select **Send**.




If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.


Dialing a Number from Contacts

- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select the contact to view the contact details.
- Select the required phone number to dial the contact or press **OK** key to dial the default number.

Editing the Contact Details

- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select the contact to view the contact details.
- Press **Options key** > **Edit**.
- Edit the required details and select **Save**.


Importing SIM Card Contacts to Phone

- From **Home** screen, select **Contacts** ().
- Select **Options key** > **Import/export**.
- Select **Manage SIM card contacts**.

The list of contacts stored in your SIM card is displayed.


4. Select the contact to be moved to the phone. The contact is imported to the phone address book.

Exporting Phone Contacts to SIM Card

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Import/export**.

The contacts are exported to the SIM card.


Exporting Phone Contacts to Storage

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Import/export**.
3. Select **Export to storage**.

All the contacts are exported to your computer as a .VCF file.

Sharing Contacts via MMS and Bluetooth


You can send contact information by MMS or Bluetooth.

1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact.
3. Select one of the following options to share the required contact:
 - **Bluetooth:** Send the contact details to a Bluetooth device paired with your phone. Select the Bluetooth device to share the contact.
 - **Messaging:** Send the contact details as a

multimedia message to any mobile phone.


Managing Contact Settings

You can edit and modify ringtone and call receiving settings for individual contacts.


1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key** and select one of the following:
 - **Set ringtone** to set a specific ringtone for that contact.
 - Enable **All calls to voicemail** to forward all incoming calls from that contact to your voice-mail box.

Managing Phonebook Settings

You can set the sort list to view the contacts and also the first or last name of the contact to be displayed first.



1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key > Settings**. Set the following options:
 - **Sort list by:** Sort the contact names by first name or last name.
 - **View Contact names:** Set the contact display name to first name or last name.

Searching Contacts

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Search** and enter the first few letters/numbers of the contact name/phone number to be searched.

All the contacts containing the search text are displayed.

Deleting a Contact

1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key > Delete** or press **Clear** () **key**. The contact is deleted after the confirmation.

Making a Call

1. From **Home** screen, select **Menu > Phone** (📞).

The Phone screen with last dialed number, frequently called contacts, Call history (🕒) and dial pad (☎) is displayed.

To dial a number use one of the following options:

- **Call history:** Select the call history icon (🕒). Select the contact/number and press the green key to make a call.
- **Frequently called contacts/numbers:** Select the specific contact/number from the frequently called numbers to make a call.

Dialing a Number via Contact

1. From **Home** screen, select **Menu > Contacts** (👤).
2. Scroll to the contact and select the contact. The contact details are displayed.
3. Select the required phone number to call the contact.

Adding a Contact from Phone Screen

1. From **Home** screen, select **Menu > Phone** (📞).
2. Select **Add to contact** (👤). You can also press **Menu** key.
3. Select Create **new Contact**.
4. Enter the contact details and select **Save**.

Viewing Call History

1. From **Home** screen, select **Menu > Phone** (📞).
2. Select the **Call history** icon (🕒) to view all recently called, received, and missed calls.

Deleting Call History

1. From **Home** screen, select **Menu > Phone** (📞).
2. Select the **Call history** icon (🕒).
3. Press the **Options** key.
4. Select **Clear call log** to delete the call history.

Managing Call Settings

You can change the incoming call ringtone, enable vibrate when ringing and enable audible press tone.

To view and modify call settings,

1. From **Home** screen, select **Menu > Phone** (📞).
2. Press the **Options** key.
3. Select **Call settings**.

Changing Ringtones and Master Volume

1. From **Home** screen, select **Menu > Settings** (⚙).
2. Select **Sound** located under **Device settings**.
3. Select **Volumes** to set the master volume separately for music, ringtones & notifications, and alarms.

You can also use the physical volume control on the phone to raise or lower volume of whatever sound is currently playing.

- In the **Call settings**, select **Phone ringtone**.
- Select the ringtone from the **Phone ringtone** list and select **Ok**.

Editing Quick Responses

When you are not able to answer an incoming call, you can send a quick response to the caller.

To view and edit quick responses, in the **Call settings** screen, select **Quick responses**, select the specific response message to edit. Edit the message and select **OK**.

Activating Vibrate Mode

In the **Call settings** screen, enable **Vibrate when ringing** to receive both ring and vibrate alerts for an incoming call. To turn off the vibration mode, disable the **Vibrate when ringing** option.

Managing Fixed Dialing Numbers

FDN (Fixed Dialing Numbers) is a SIM card-enabled feature. When activated, this feature restricts outgoing calls only to phone numbers listed in the FDN list. This feature can be activated only if PIN2 is entered. Contact your network operator if you do not have a PIN2.

To access FDN option, select **Dialer > Call settings > Fixed Dialing Number**.

Setting TTY Mode

If you enable TTY mode, hearing-impaired individuals can send and receive phone calls as text over the phone.

- In the **Call settings** screen, select **TTY mode** to

view and modify TTY mode settings.

- Set one of the following options:
 - TTY Off:** disables TTY mode.
 - TTY Full:** enables TTY mode for both incoming and outgoing calls. Set this for both hearing and voice assistance.
 - TTY HCO:** enables TTY mode only for incoming calls. Set this for only hearing assistance.
 - TTY VCO:** enables TTY mode only for outgoing calls. Set this for only voice assistance.

Call Forwarding

You can forward your incoming calls to a number in the contacts or a new number, provided your network operator supports this service. To access call forwarding settings, in the **Call settings** screen, select **Call forwarding**. Select one of the following call forwarding options:

Option	Function
Always forward	Forward all incoming calls to a pre-designated number.
Forward when busy	Forward calls when your phone is busy.
Forward when unanswered	Forward calls when you do not answer incoming calls.
Forward when unreachable	Forward calls when your phone is switched off or is out of coverage area.

Call Waiting

When call waiting is enabled and the phone is in conversation, the incoming number is displayed when you receive a call. To activate call waiting, in the **Call settings** screen, select **Additional settings**. Enable **Call waiting**.

Internet Call Settings

You can make calls and receive calls over the Internet when connected to a Wi-Fi network, rather than over your mobile network.

To place a call over the Internet, your phone must be configured to use an Internet calling account. After you set up the account, placing an Internet call is not different than placing any other call. However, you must be connected to a Wi-Fi network. When you are making an Internet call, the phone displays the Internet call near the top of the screen.

SIP Accounts

Internet calling is based on the Session Initiation Protocol (SIP) for voice calls on the Internet Protocol (IP) network.

To add a SIP account and configure your incoming and outgoing preferences:

1. In the **Call settings** screen, select **SIP Accounts**.
2. Enable **Receive incoming calls** to answer incoming Internet calls.
This might reduce your phone's battery life.
3. Select **Add account** to configure a new SIP account.

4. Enter the following details and select **Save**:
 - **Username:** Username to login to SIP account.
 - **Password:** Password to login to SIP account.
 - **Server:** SIP server details.
 - **Set as primary account:** Enable to set this SIP account as the primary account.
 - **Optional Settings:** Select to view/modify or hide optional details such as authentication username, display name, outbound proxy address, port number, transport type and Send keep alive options.

Use Internet Calling

1. In the call settings screen, select **Use Internet Calling** located under **Internet call Settings**.
2. Select one of the following options:
 - **For all calls when data network is available:** If this option is selected and when the phone is connected to a Wi-Fi network or mobile Internet, each dialed call becomes an Internet call.
 - **Only for Internet calls:** If this option is selected, only Internet calls can be dialed.
 - **Ask for each call:** If this option is selected, when a number is selected to dial, a dialog is displayed to select either cell phone call or Internet call.

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files, and so on.


You can use the messaging function on your phone to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.



The MMS feature is available only if you subscribe to it from your network operator.

To access a messages function, from the **Home** screen, select **Menu > Messaging** ().

Sending SMS/MMS Messages

1. To create a SMS message, from the **Home** screen, select **Menu > Messaging** ().
2. Select **Options key > New message**.
3. Enter the contact name or the phone number in the **To** field.
If you enter an alphabet, all the contact names starting with that alphabet is displayed as a list. Scroll down to select the contact.
4. Enter the message and select **Options key > Send**.

When you add a multimedia attachment, the message is automatically converted to a multimedia message. MMS charges are applied based on the operator.

5. You can add any multimedia attachment up to

the size of ≤ 1 MB. To add an attachment, select **Options key > Attach**. Select the attachment type from the options in the next step.


6. Browse **My files** or specific folder and select the multimedia file to be attached.

Attachment Type	Description
Pictures	Attach a photo from the phone memory.
Capture picture	Take a new photo using the mobile camera and attach.
Videos	Attach a video from the phone memory.
Capture video	Take a new video using the mobile camera and attach.
Audio	Attach an audio file from the phone memory.
Record audio	Record a new audio file using the voice recorder and attach.
VCard	Attach a contact.
VCalendar	Attach a calendar event.
Slideshow	Create new slideshow or edit the existing slides and attach.

Managing Message Settings

You can customize the way you want to view and filter the messages. You can also set the default messaging application.

To view and modify the message settings,



1. To edit message settings, from the **Home** screen, select **Menu > Messaging** ().
2. Select **Options key > Settings**.
3. View and edit the following settings:

Setting	Description
Delete old messages	Delete the old messages automatically when the storage limit is reached.
Text message limit	Set the maximum number of SMS messages to be stored.
Multimedia message limit	Set the maximum number of MMS messages to be stored.
Creation mode	Sets the MMS message creation mode to one of the following: <ul style="list-style-type: none"> • Restricted - the phone will only create and send messages with content belonging to the Core MM Content Domain. • Warning - the phone guides you to create and submit only messages with content belonging to the Core MM Content Domain. This guidance is implemented through warning dialog. • Free - you can add any content to the message.



Notification	Enable notification alert for incoming messages.
Sound	Set the default alert tone for incoming messages.
Vibrate	Enable vibrate alert for incoming messages.
Manage SIM card messages	Enable to view the messages stored on the SIM card.

Deleting Messages


To delete a single message thread:

1. From the **Home** screen, select **Messaging** ().
2. Select **Options key > Delete selected thread** or select a thread and press **Clear** key ().
3. The message thread will be deleted after confirmation.

To delete the selected conversation:

1. From the **Home** screen, select **Messaging** () > select a **Message Thread** > press **OK**.
2. Select a conversation > select **Options key > Delete** or press **Clear** key ().
3. The message conversation will be deleted after confirmation.

To delete all the message threads:

1. From the **Home** screen, select **Messaging** ().
2. Select **Options key > Option**.

3. Select **Options key > Select > Select Multiple threads > Option key > Delete All threads**. All the message threads are deleted after confirmation.

Emergency Alerts

You receive active alerts and emergency alerts from the service provider.

You can view and modify the language and dictionary setting using the **Phone Settings**.

Enter and Edit Text


You can use the phone keypad to enter the text quickly and easily. Type faster and more accurately on your device with Keypad's word recognition and next-word predictions.

The key features are:

- Personalized suggestions, corrections, and completions.
- Keypress popup animations.
- Emoji entry point and layouts.

Phone Dictionaries

To manage phone dictionaries:

1. From the **Home** screen, select **Menu > Settings** ()
2. Select **Language & Input** located under **Personal settings**.

Personal Dictionary


You can add your own words to your personal dictionary so that your device remembers them. To add a word or phrase, including an optional shortcut:

1. Select **Language & Input** located under **Personal settings**.
2. Select **FlexT9 Text Input** located under **Keyboard & input methods**.
3. Select **Personal dictionary > Options key > Add**.

4. Add a required word and respective shortcut which is optional.


Your Sonim phone comes with pre-loaded **Push-to-talk** application.

Select the **PTT** button on the side of the XP5 phone or select the **PTT** icon on the panel of the **Home** screen.

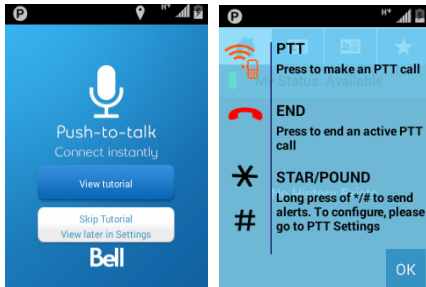


Activating PTT Using Wi-Fi

1. A screen is displayed prompting to activate **PTT** service using the Wi-Fi network as a cellular data network.

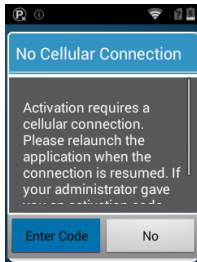


2. The screen prompts you to enter the activation code provided by the corporate administrator in the specified text box. Enter the activation code and click **Yes** to activate the **PTT** over Wi-Fi network.

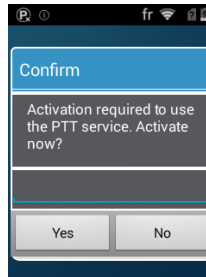


Enhanced PTT Users Advanced Setting


From the handset's **Home** screen, select the **PTT** icon and launch the application. The following **PTT** menu icons are displayed:

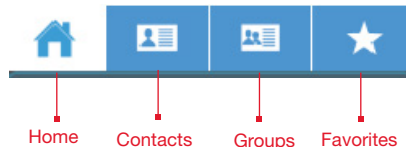

Home: Displays your **PTT** calls and conversation history. You can also change your presence status here. The user is allowed to initiate a call and send IPA.

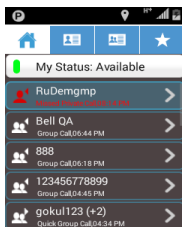



Contacts: Displays your contacts and allows you to start an **PTT** call, and send an alert.

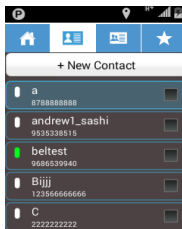

Groups: Displays your groups and allows you to create/edit a group or initiate a group call.



Favorites: Displays your favorite contacts and groups. You can easily start **PTT** calls to your favorites.

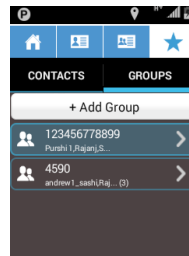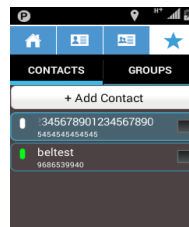


The **PTT** contacts directory is different from the phone's native contacts directory. There are two ways to add **PTT** contacts:


- **Add from Native Phonebook:** Select **Native Phone Book** from **+ New Contact**. It opens phone's native contact list, and the user can select the contact from contact list and can modify the selected contact or save the same contact as it is.
- **Add by Manual Input:** Select **Manual Input** from **+ New Contact**. It opens a screen to add the contacts. User can create contact manually by typing phone number, name, set favorite and save.

Adding Contacts from Native Phonebook


1. Go to **Contacts** and select **+ New Contact**. The following screen is displayed.

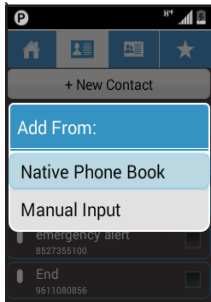


2. Select the **Native Phonebook**. The following screen is displayed.

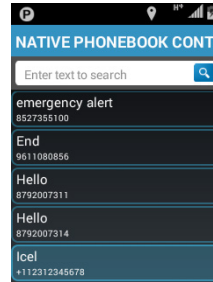



3. To modify the contact imported from the native book manually, edit the contact's name and phone number, then select **Save**.

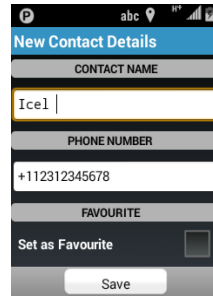

4. If you want a contact to be added as a favorite, then check **Set as Favorite** before pressing **Save**.

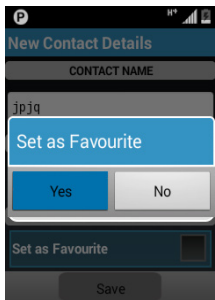


- Once the contact is saved, it is added to the **PTT** contact list.

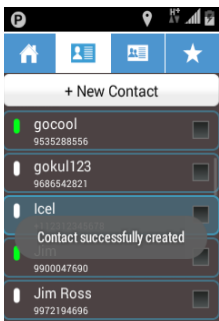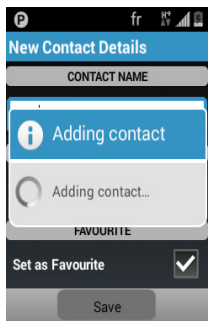


Adding Contacts by Manual Input

Use the numeric keyboard to input text and numbers, special characters. The special characters can only be found by pressing the numeric key 1 multiple times until you find the special character or use the select screen to input special characters by long pressing numeric key 1.


- Go to the contacts and select **+ New Contact**.
- Select **Manual Input**.

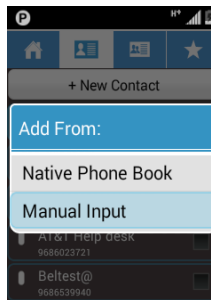


- To enter a contact manually, type the contact's name and phone number, and then select **Save**.

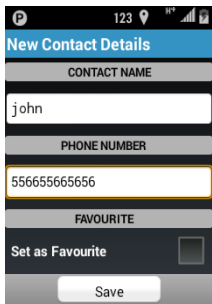

4. If you want a contact to be added as a favorite, then check **Set as Favorite** before pressing **Save**.

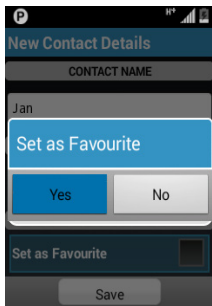


5. Once you save a contact's information, it is added to the **PTT** contact list. The contact is added successfully.

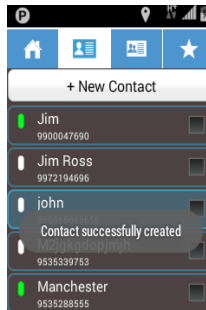

Groups can be added by creating manually or can be pushed to the phone by the corporate administrator. The groups pushed by the corporate administrator (Corporate groups) cannot be changed or deleted from the handset.


1. Go to the **Groups** screen and select **+ New Group** to add a new group.
2. The **New Group Details** screen is displayed.

Enter the group name, scroll down and press **+Add members**. The **Group Members** list is displayed. Select the desired contacts as group members. Go back to the **New Group Details** screen by using the **Return** key. Press **Save** to add the group.

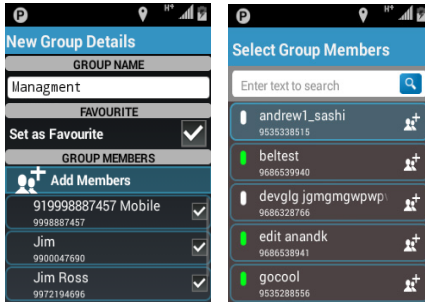

You can assign a group as a favorite by selecting **Set as favorite**.

3. A new group is added successfully.

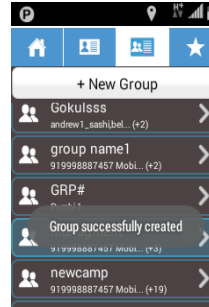


Deselecting the member(s) from a **Group** screen, removes those member(s) from the **Group**.


Making a PTT Call to an Individual

1. Go to the **Contacts** screen and select the contact you desire to call.


A call to an individual can also be initiated from **Call** option present after selecting the **Options key** on the phone.

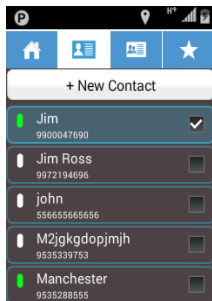


2. Press the **Push-to-talk** button to initiate a call or long press on **CSK** by highlighting the desired contact and choose call option from the option list. The screen with “No one speaking” will be displayed.
3. Press and hold the **Push-to-talk** button to start the call. Start speaking after you hear the chirp.

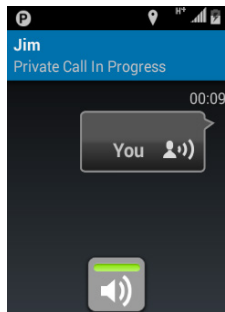

4. When you finish speaking, release the **PTT** button.
5. When no one acquired the floor, **No One Speaking** active PTT call screen displayed.

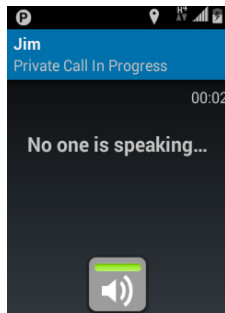


6. Press the **Options key** and select **End Call** option to end the call.

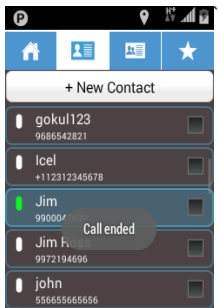


Making a PTT Call to a Group


1. Go to the **Groups screen** and select the group you desire to call. Press the **PTT** button to initiate a group call or select a call option from **Options Menu/Context** menu to initiate a group call.

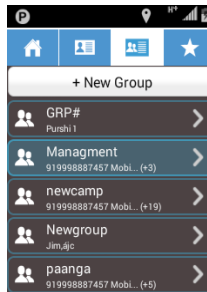



2. Select **Options key** to get the options. Select **Call** from the **Options**.

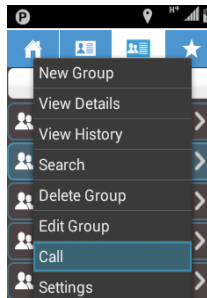

3. Press and hold the **Push-to-talk** button and start speaking after you hear the chirp tone. All the available group members receive the call.

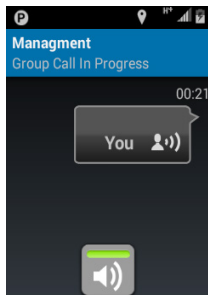


4. Press **LSK** to invoke menu and select **End call** option to end the call.

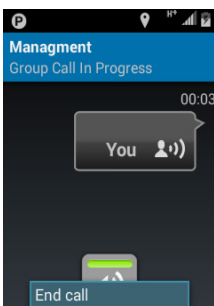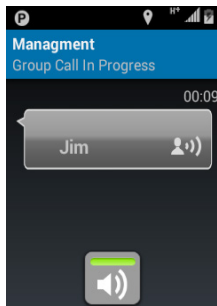


Making a Quick Group Call


1. Go to the **Contacts** screen and mark the contacts you would like to include in your quick group **PTT** call.

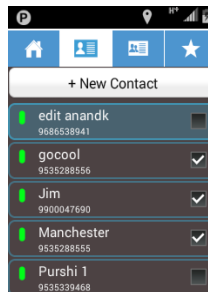


2. Press the **PTT** button or select **Call** from **Options Menu** to initiate the call to the selected members.

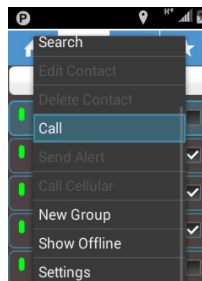

3. Press and hold the **Push-to-talk** button to start the call. The call is initiated to all the selected contacts. Start speaking after you hear the chirp tone.

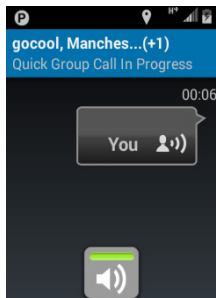


4. Press the **Options** key and select **End call** option to end the call.

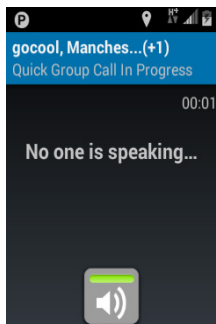


Editing PTT Contact

1. Select a **Contact** from the list.


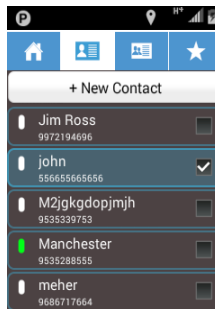


2. Select **Options** key or long press on **CSK** button by highlighting the contact and select **Edit Contact**.


52

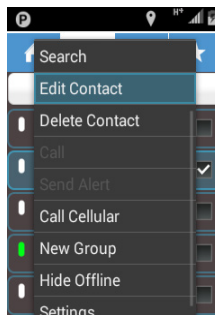

3. Edit the contact name and favorite setting if required and press **Save**.

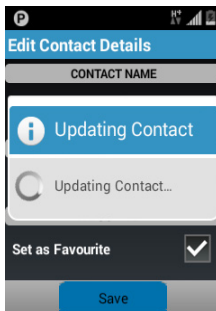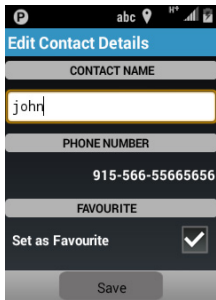


The contact modifications are updated.

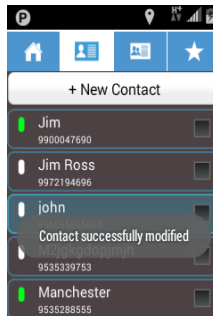

Deleting PTT Contact


1. Select a **Contact** from the list.

53


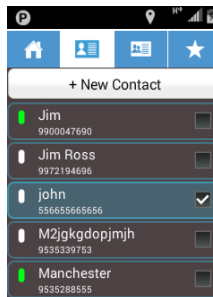


2. Press **LSK** to invoke menu or long press on **CSK**

button by highlighting the contact and select **Delete Contact** option.

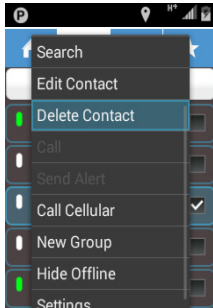


3. A confirmation message is displayed. Select **Yes** to delete the selected contact. The selected contact is deleted from the contact list.

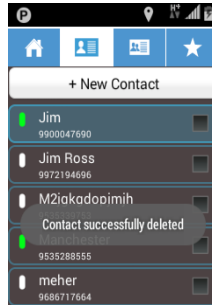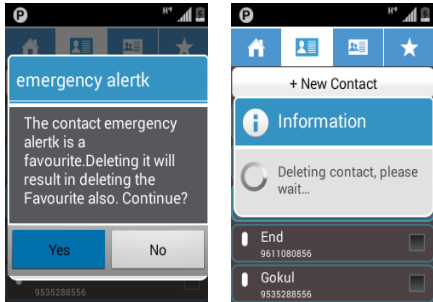

Editing PTT Group


1. Select a group from the list and select the **Options** key.

54

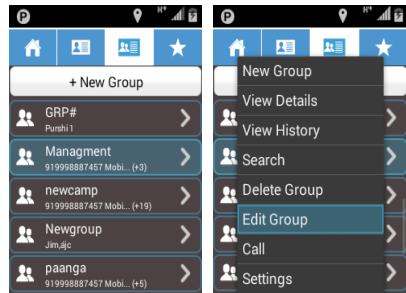

2. Select **Edit Group** to edit the **Group Name**,




Favorite. The user can add members and remove members.

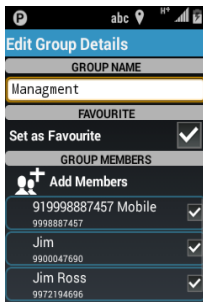

The other ways to edit the group are:


- Long press on **CSK** button by highlighting the group and select **Edit Group** from the **Options Menu**.
- Press **LSK** to invoke menu and select **Edit Group** option.

The selected group details are edited and modified successfully.

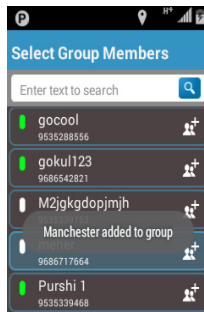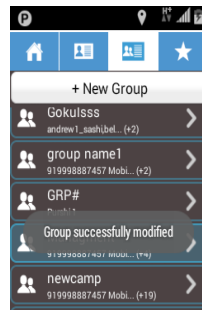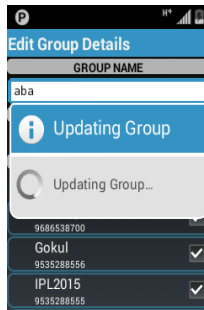


Deleting PTT Group


1. Long press on **CSK** button by highlighting the group and select **Delete Group** from options menu.

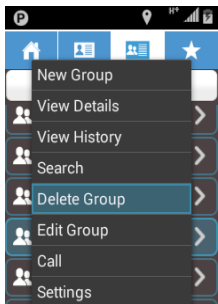


2. A confirmation message is displayed. Select **Yes** to delete the group.

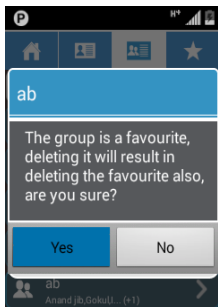

3. A pop-up message is displayed confirming that the selected group is getting deleted.

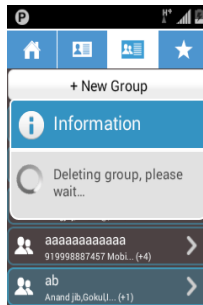


4. The selected group is deleted and a message is displayed **Group successfully deleted**.

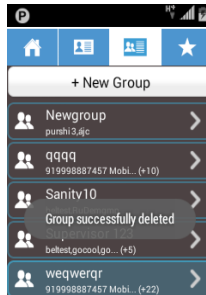


Adding a Favorite Contact

The user can add contacts as favorites. The favorite contacts are listed under **Favorites** tab.


1. **To set a Contact as Favorite:** Go to **Favorites Contact** tab and select **+ Add Contact**. The contact list is displayed. Select the desired contact/contacts.

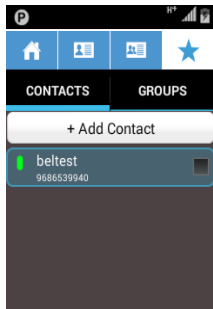

2. The selected contacts gets added as a favorite and is displayed under the favorites contact tab.

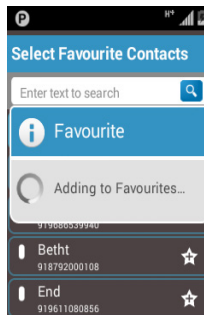


3. Selected contact is added to **Favorite** successfully.

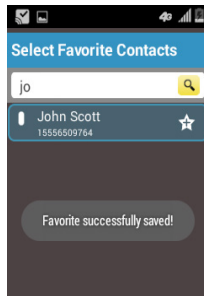


Adding a Favorite Group

The user can add groups as favorites. The favorite groups are listed under **Favorites** tab.


1. **To set a group as favorite:** Go to **Favorites Groups** tab and select **+ Add Group**. The group list is displayed. Select the desired **Group/Groups**.

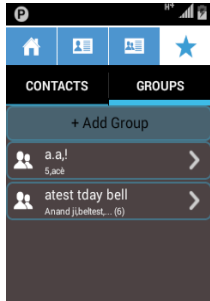

2. The selected groups gets added as a favorite and is displayed under the favorite groups tab.

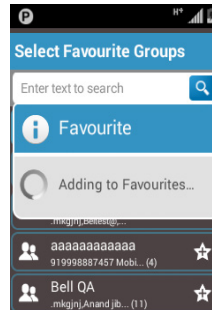


3. Selected group is added to **Favorites** successfully.

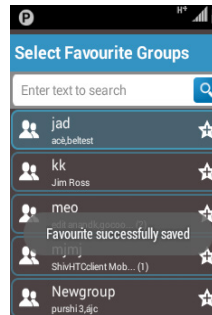


PTT Presence Status Change



The **PTT Presence** can be set in two ways:

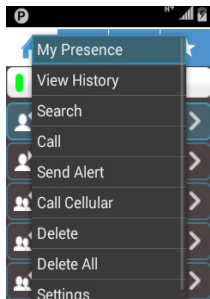1. Select **Options key > My Presence**.

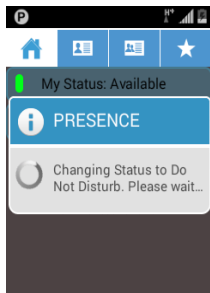


2. **My Presence** status can be changed from **Available** to **Do Not Disturb** and vice versa.




3. Select **My Status** from Conversation history screen.
 - Available ()
 - Do Not Disturb ()


Select one of the following options:

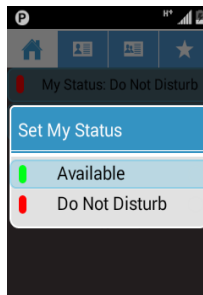

- **Available:** You are available to accept calls and can send or receive alerts.


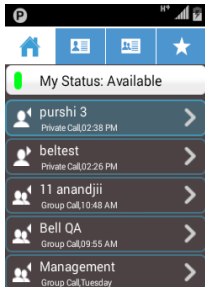


- **Do Not Disturb:** You are not available to accept calls, but alerts can be received.

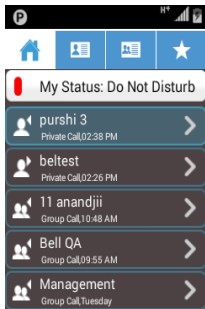

Sending Personal Alert


Select the desired contact from the contact list and select **Send Alert** from the menu.

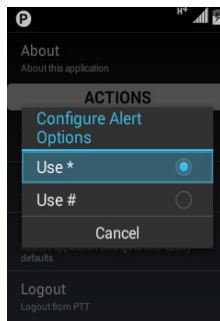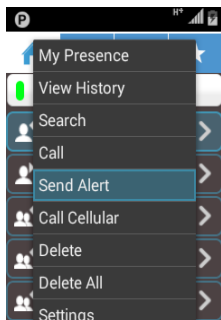

The **personal alert** is sent to the selected contact by pressing * or #.

The personal alert can also be sent using the * or # keys:


1. In **PTT** screen, press **LSK** to invoke the **Options** menu.
2. Select **Settings > Actions > Configure Alert Options** to choose either * or # to send the personal alerts.

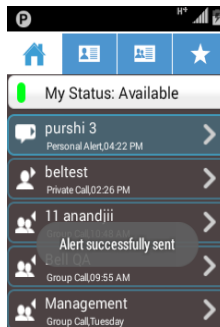

Receiving Personal Alert

When a personal alert is received, the user is notified with the sender's details such as **Name**, **Date** and **Time**.


Select the **Call** button or press **PTT** hard key to initiate **PTT** call with the sender.

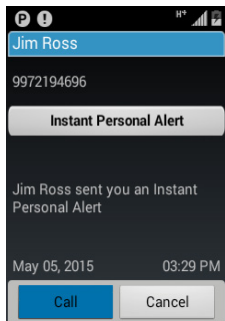

When the user is in **Do Not Disturb mode**, personal alerts can still be received.

Missed call Alert


If a Push-to-talk call comes in while you are on a regular phone call or another PTT call, you will receive a missed call alert. Also, if PTT call is received and floor is not acquired once, then **Missed Call Alert** notification is received.

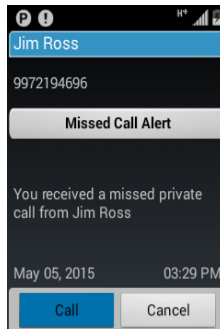

To view the **PTT** call history screen, go to the **Home** screen and see a list of the most recent **PTT** calls. You can make a call to a contact and group from the conversation history. Also send and receive alerts from the conversation history.


1. Available Status:

When the **PTT** service is available, **My Status** is in **Available** status and the icon is displayed green in color.

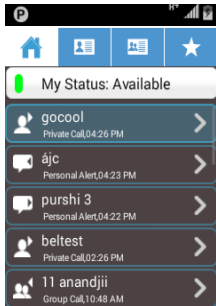


2. Do Not Disturb Status:

When the **PTT** service is set to **Do Not Disturb**, **My Status** is in **Do Not Disturb** status and the icon is displayed red in color.

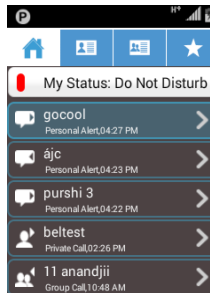


3. Offline Status:

- When the service is not connected or in offline status, the **PTT** notification icon is displayed in the status bar.

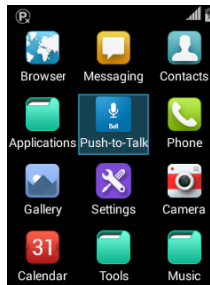


- When there is a network error while connecting to the **Push-to-talk** service and in offline status, the **Presence** icon shown offline.

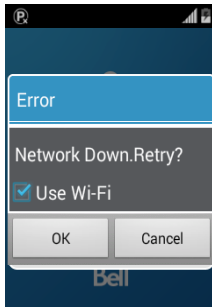

You can customize the application through the **Settings** tab. The following are the most commonly used settings options.

1. Select **Options (LSK) > Settings**.
2. **Alerts and Sounds:** Notification alert tones can be set to vibrate or audible tones.



To view the following options, go to **Options (LSK) > Settings > Alerts and Sounds**.

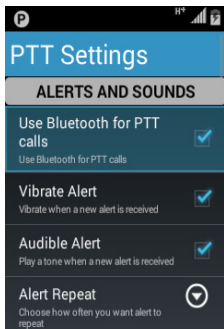

- **Use Bluetooth for PTT calls:** Using bluetooth for PTT calls after pairing with other devices.
- **Vibrate Alert:** Vibrate when new alert is received.
- **Audible Alert:** Play a tone when new alert is received.
- **Alert Repeat:** Choose how often you want alert

to repeat, like once, repeat and continuous.

  
- **Alert Frequency:** Choose frequency for alerts like 2, 5, 10, and 20 Seconds.
- **Receive Call in Background:** Allows user to receive **Push-to-talk** in background while accessing the phone.
- **Vibrate Incoming call:** Vibrate when an incoming call is received.
- **Speaker:** The speaker can be turned **ON** by checking the checkbox. Uncheck the checkbox to turn **OFF** the speaker.



By default, the speaker is **ON** and the user gets a call on the loudspeaker.

- **Privacy Mode:** Determine whether to mute the incoming call or use handset earpiece when handset is in silent mode.
3. **Notification Control:** The notifications can be controlled.


To view the following options, go to **Options (LSK) > Settings > Notification Control**.

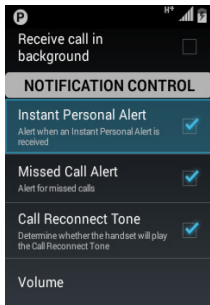

- **Instant Personal Alert:** Alert when Instant personal Alert is received.
- **Missed Call Alert:** Alert for when a missed call is received.
- **Call Reconnect Tone:** Determine whether the handset plays the Call Reconnect Tone.
- **Volume:** To increase or decrease the volume from level 0 to level 15.


4. **Information:** The information such as Display name and **PTT** Number are displayed.

To view the following options, select **Options key > Settings > INFORMATION.**

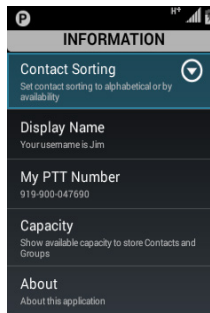

- **Contact Sorting:** Set contact sorting to alphabetical or by availability.
 - **Display Name:** Your username is displayed.
 - **My PTT Number:** It displays the activated **PTT** number.
 - **Capacity:** Shows available capacity to store Contacts and Groups.
 - **About:** Displays information about **PTT** application.
5. **Actions:** The actions such as **Configure Alert Options, Show Tutorial, and Restore Default Settings** can be performed from the following screen.


To view the following options, select **Options key > Settings > ACTIONS.**

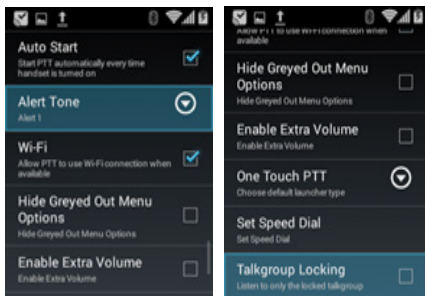


- **Configure Alert Options:** Use * or # key to send personal alerts.
- **Show Tutorial:** User can view the tutorial of PTT application.
- **Restore Default Settings:** Restore all application settings to their default values.
- **Logout:** Logout from PTT application.
- **Auto Start:** Start the PTT application automatically every time, when handset is turned ON.
- **Notification Tone:** To set the Alert tones like Alert1, Alert2, Alert3 & Alert4.
- **Wi-Fi:** Allow PTT to use Wi-Fi connection when available.
- **Hide Greyed Out menu Options:** Hides greyed out items in Menu option.
- **Enable Extra Volume:** Enables to set extra volume.

- **One Touch PTT:** Choose default screen launcher.
- **Set Speed Dial:** Set the speed dial.
- **Talkgroup Locking:** Enable/Disable Talkgroup Setting.



1. To logout of the **Push-to-talk** application, go to **Push-to-talk** setting and select **Logout** option.

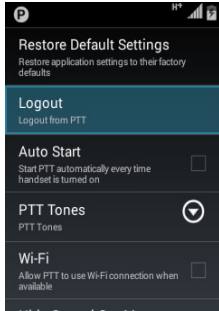


The **Push-to-talk** application is logged out and goes to the **Home** screen.

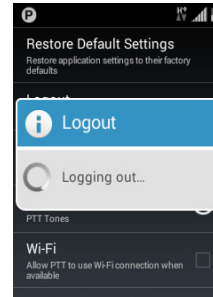

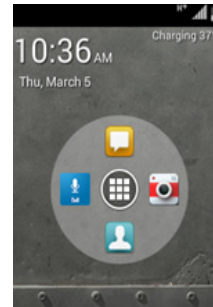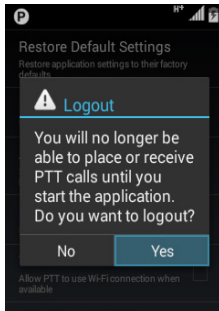


2. Confirm the logout screen by selecting **Yes** on the confirmation screen.



Camera


The Sonim XP5 has a back camera with 5MP fixed focus for taking pictures. The pictures are saved in the **Gallery** () in your phone memory. You can access the **Gallery** from the **Menu** screen.

- Select **Camera mode** (), to set one of the following modes :
 - **Normal** - () : To shoot a picture in normal mode, select **OK** button to capture the picture. Use Left and Right navigation keys for Zoom in and Zoom out.
 - **Video** - () : Press **OK** key to **Start/Stop** a video recording. You cannot pause the recording in the middle.
- Select **Options key** to view or change camera settings such as flash, exposure, and file size.

Calendar

The **Calendar** helps you to set and view appointments, schedule reminders, and alerts.

To access calendar:

1. Select **Calendar** icon () on the **App Menu** screen.
2. To change the calendar view, choose **Month** or **Agenda** from **Options** menu.
3. Select **Options key** to view the list of the following available options:
 - **Today**: Shows the current date in the Calendar.
 - **New event**: Add a new event to the Calendar.




- **Search**: Search for previously saved Calendar events, by giving a key word in search box and pressing **OK** key.
- **Settings**: Changes the general settings of the Calendar.

From any of the calendar views,

- **Read or edit event details**: Select the event to view the details.
- **Manage events and calendar**: Select icons across the menu to search or create events, return to today, or adjust settings.

Alarm

You can set an alarm for a particular time.

1. Select the **Clock** icon () located in **Menu** screen > **Tools** () .
2. Select the Alarm activation icon () on the top of the screen.
 - Press **Options** key and choose **Add and set** desired alarm time and Press **OK** key to set a new alarm.
 - To **Edit** or set **Repeat**, select alarm from the list using **Up/Down** navigation key and press **Options** key and choose **Edit**.



The alarm will work even when the phone is set in silent mode.

Clock

You can view the time of major cities in different time zones using this function. You also have the option to use Daylight Saving Time (DST).

- The local time in the home city is displayed in the upper half of the screen.
- Select **World clock** icon (🌐) located on the top of the screen. To view the list of cities and the current time, select **Options key > Cities**.

The world cities are listed in alphabetical order.

- To set the home city, select the required city from the list. It is added to the **Selected Cities** list. The selected city is set as the home city.

Calculator

The **Calculator** is designed to perform basic mathematical calculations. Press **Options** key and choose **Advanced panel** to perform advanced calculations.

To access the calculator, select **Tools** (🔧) > **Calculator** (🧮) located in **Menu** screen.

- To enter the numbers, press the numeric keys.
- To insert a mathematical operation symbols, press the respective **Navigation** keys.
- Select (⏏) for the final results.

Sound Recorder

You can record voice memos using the sound recorder.

To access the sound recorder, select **Tools** (🔧) >

Sound recorder (🎙️) located in **Menu** screen.

- To record an audio file, select **Record** (🔴).
- To stop the recording, select **Stop** (⏏).
- To save the voice memo, select **Options key > Save**.
- To exit without saving, select **Options key > Discard**.
- To play the recorded file instantly select **Play** (▶).

Music Player

Your phone has a built-in music player that lets you play your favorite tracks.

To open the music files, select **Music file** (🎵) from Music folder (📁) located in **Application menu** screen.

- Select **Playlist** to access the default playlists in the music folder.
- Select **Recently Added** playlist to view the music files that are recently added to the music folder.
- Select **My recordings** playlist to access all your voice memo files.
- Select **Artist** to view the music files sorted based on the artists.
- Select **Album** to view the music files sorted based on the albums.
- Select **Songs** to view the complete list of songs stored in your phone.
- Select the required song/memo to play.

License

This wireless device, (the “Device”) contains software owned by Sonim Technologies, Inc. (“Sonim”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, Sonim grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect Sonim and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sonim, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The laws of Delaware, United States shall govern the validity, construction and performance of this license.

Comprehensive 3-Year Warranty

- Sonim provides this Comprehensive 3-Year warranty for your mobile phone (hereinafter referred to as “Product”).
- To activate the 3-year comprehensive warranty, register your phone within 30 days at www.sonimtech.com/register or use the warranty registration application.
- Should your Product need service, please contact your local Sonim Customer Service Center. The online support and country specific contact information can be found at: www.sonimtech.com/support or e-mail to: support@sonimtech.com.

Warranty Registration Application

- You can register your phone using the Warranty Registration Application on your device.
- This application initiates automatically after first boot up and prompts to register the handset now or later.
- All the mandatory fields have to be filled, some fields such as IMEI and model number are auto populated.
- State and Zip code fields are same as Province and Postal code.
- Once all the mandatory details are submitted, an e-mail confirmation will be sent.
- If not registered, the application will remind the user to register every two days. After ten reminders the user has to register online.

Our Warranty

Subject to the conditions of this Comprehensive 3-Year Warranty Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of Three (3) years.

What We Will Do

If during the guarantee period, this product fails to operate under normal use and service, due to defects in design, material or workmanship, Sonim's authorized distributors or service partners, in the country/region where you purchased the product, will repair or replace at the sole discretion of Sonim, with the same or better model in the same or better condition.

Sonim and its service partners reserve the right to charge a handling fee if a returned product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sonim Product is repaired or replaced. Sonim does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss.

You should always make backup copies of all the information stored on your Sonim Product such as downloads, pictures, video's, music, calendar and contacts before handing in your Sonim Product for repair or replacement.

You should always remove SIM cards and MicroSD cards before handing in your Sonim Product for repair or replacement. Depending on local law and legislations we will, in order to protect your data and privacy, destroy any received SIM cards and MicroSD cards.

Phone Care

Each Sonim Phone has a designated IP class for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 6.5 feet/2 m deep water for up to 30 minutes. Immersion in deeper water can damage it and must be avoided.

Sonim phones are built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the height of 6.5 feet/2 meters. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

Conditions

1. The warranty is valid whether or not the product has been registered.
2. The warranty is valid only if the original proof of purchase issued to the original purchaser by an authorized service provider, specifying the date of purchase and serial number for this Product, is presented with the Product to be repaired or replaced. Sonim reserves the right to refuse warranty service if the device is found to be out of warranty under the conditions as set forth herein.
3. If Sonim repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sonim.
4. This warranty does not cover any failure of the

Product due to normal wear and tear, or due to misuse or abuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim device specifications and instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the product beyond what is described as acceptable in the user guide for the product. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out - this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sonim recommends that you use only batteries and chargers approved by Sonim. Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Up to three defective pixels are deemed acceptable.

5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by any person other than a Sonim-authorized person. Tampering with any of the seals on the Product will void the warranty.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sonim-branded original accessories intended for use with the Product.
7. The 3-Year warranty does not cover 3rd party

accessories or any 3rd party software applications, which are instead covered to the extent provided by the original vendor guarantee for these products.

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Accessories

Sonim accessories are warranted as follows:

Sonim Branded

- All Sonim branded accessories, in-box as well as optional, are warranted for a period of one (1) year under Sonim's 1-Year limited warranty.
- For a detailed list of Sonim branded accessories, please go to: www.sonimtech.com/accessories.

Battery

All device batteries both embedded and removable are warranted for a period of one (1) year under Sonim's 1-Year limited warranty.

1-Year limited warranty

Sonim provides a limited 1-Year warranty for this accessory (hereinafter referred to as "Product"). Subject to the conditions of this limited 1-Year Warranty Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for an original purchase by a consumer, and for a subsequent period of one (1) year.

Conditions:

1. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse or abuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim Product specifications and instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the Product beyond what is described as acceptable in the user guide for the Product.
2. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by any person other than a Sonim-authorized person. Tampering with any of the seals on the Product will void the warranty.
3. The warranty does not cover Product failures, which have been caused by use of other peripheral devices, which are not Sonim certified and intended for use with the Product.
4. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN

THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

WARNING: Changes or modifications made to this equipment not expressly approved by Sonim Technologies, Inc. for compliance could void the user's authority to operate the equipment.

FCC Statement

- This device complies with part 15 of the FCC rules (**FCC ID: WYPL15V013AA**). Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a

circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Statement

This device complies with RSS-310 of Industry Canada (**IC ID: 8090A-L15V013BA**). Operation is subject to the following two conditions:

1. This device does not cause harmful interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FOR PORTABLE DEVICE USAGE (<20cm from body/SAR)**Radiation Exposure Statement:**

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or set the device to lower output power if such function is available.

- The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.FOR MOBILE DEVICE USAGE (>20cm/low power).

IC Statement

This device complies with RSS-310 of Industry Canada (**IC ID: 8090A-L15V013BA**). Operation is subject to the following two conditions:

1. This device does not cause harmful interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

FOR PORTABLE DEVICE USAGE (<20CM FROM BODY/SAR)

Radiation Exposure Statement:

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or set the device to lower output power if such function is available.

- The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.FOR

MOBILE DEVICE USAGE (>20cm/low power).

Règlement IC

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence (**IC ID: 8090A-L15V013BA**). L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage, et
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Cet appareil est conforme à la norme RSS-310 d'Industrie Canada. L'opération est soumise à la condition que cet appareil ne provoque aucune interférence nuisible.

FOR PORTABLE DEVICE USAGE (<20cm from body/SAR needed)

Déclaration d'exposition aux radiations

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

A

- Actions 66
- Adding a contact from phone screen 37
- Add new contact 34
- Alarm 69
- Alerts and Sounds 65
- All applications icon 18

B

- Backup data 33
- Battery
 - Charging indicator 13
- Battery usage 13
 - Charging 13
 - Improving battery life 14
 - Optimize power 13
- Broadcast messages 41

C

- Calculator 70
- Calendar 69
- Call accept/Send key 16
- Call monitoring 38
- Call waiting 39
- Camera 69
- Changing wallpaper 20

Clock 69**Contacts**

- Add 34
- Send message 34

D

- Data backup and restore 33
- Deleting a contact 36
- Deleting call history 37
- Deleting messages 41
- Dialing a call 37
 - From People 37
- Display settings
 - Wallpaper 20

E

- Editing contact details 34
- Events 69
- Exporting contacts to computer 35
- Exporting contacts to SIM card 35

F

Frequently called list 37

H

HAC rating 10

I

- Importing contacts to phone 34
- Information 66
- Internet calls 39

K**Keypad**

- Accept/Send 22
- Back 22
- Function keys 44
- Navigation keys 23

Keypad functions 25**L**

- Language settings 25
 - Personal dictionary 25
 - Speech 25
 - Spell checker 25

M**MMS** 40

- Sending MMS message 40

Music player 70**N**

- Notification bar icons 18
- Notification control 65

P

People 34
Phonelock screen 20
Phone specifications 15
Power optimization 13
Power saving settings 26
 Viewing battery life 26

Q

Quick Responses 38

R

Restore data 33

Ringtones 37

S

Safety guidelines for mobile usage
8

SAR information 10

Searching contacts/people 36

Security settings
 Phonelock screen 20

Sending SMS 40

Sending SMS/MMS
 From People 34

Setting up your phone 17

Sharing contact details 35

SIP accounts 39

SMS 40

SMS settings 40

Sound recorder 70

System icons 18

V

Vibrate mode 38

Viewing contact details 34

X

XP5 Phone 16